


# BRIERLEY SOFT CLOSE TOILET SEAT

INST01037

# INSTINCT®


**INSTALLATION & AFTERCARE INSTRUCTIONS** Please read carefully before attempting to fit the seat. If you are not the end user, please make sure the aftercare instructions are made available for the end user to read.

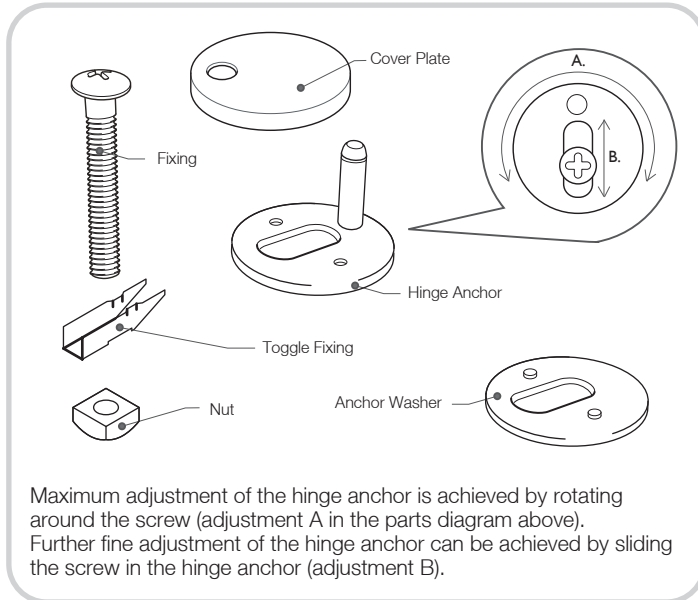

The diagram shows the following components: Fixing (a long screw), Cover Plate (a circular disc), Hinge Anchor (a circular base with a central pin), Toggle Fixing (a small metal piece), Nut (a hexagonal nut), and Anchor Washer (a circular washer). A circular inset shows adjustment points: 'A' indicates rotation around the central screw, and 'B' indicates sliding the screw in and out of the hinge anchor.

Maximum adjustment of the hinge anchor is achieved by rotating around the screw (adjustment A in the parts diagram above). Further fine adjustment of the hinge anchor can be achieved by sliding the screw in the hinge anchor (adjustment B).


### 1. Insert anchor and toggle fixing

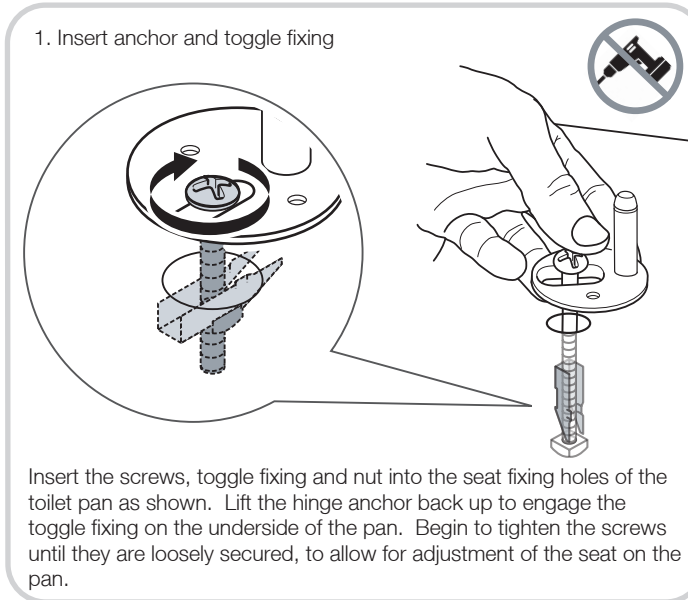

The diagram shows a hand inserting a toggle fixing into the underside of the toilet pan. A circular inset shows the hinge anchor being inserted into the pan's hole. A 'no power drill' symbol is present, indicating that the screws should be tightened by hand.

Insert the screws, toggle fixing and nut into the seat fixing holes of the toilet pan as shown. Lift the hinge anchor back up to engage the toggle fixing on the underside of the pan. Begin to tighten the screws until they are loosely secured, to allow for adjustment of the seat on the pan.


### 2. Fitting the seat

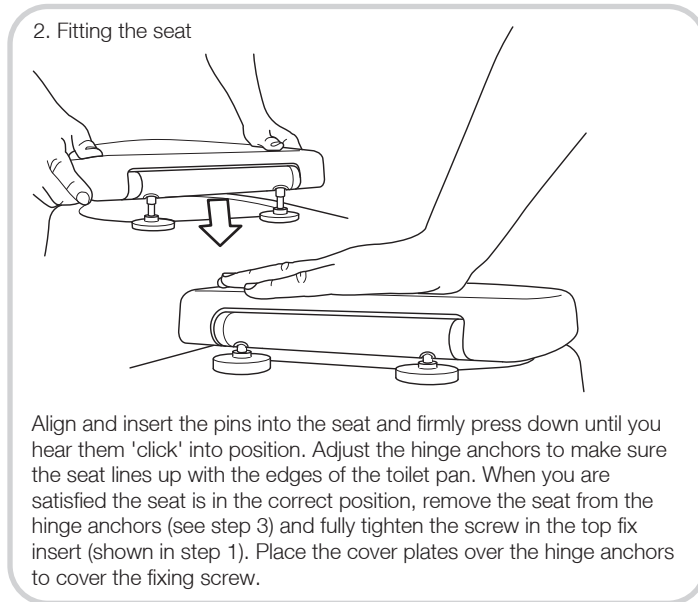

The diagram shows a hand aligning the seat with the pan and pressing it down. A downward arrow indicates the direction of movement.

Align and insert the pins into the seat and firmly press down until you hear them 'click' into position. Adjust the hinge anchors to make sure the seat lines up with the edges of the toilet pan. When you are satisfied the seat is in the correct position, remove the seat from the hinge anchors (see step 3) and fully tighten the screw in the top fix insert (shown in step 1). Place the cover plates over the hinge anchors to cover the fixing screw.



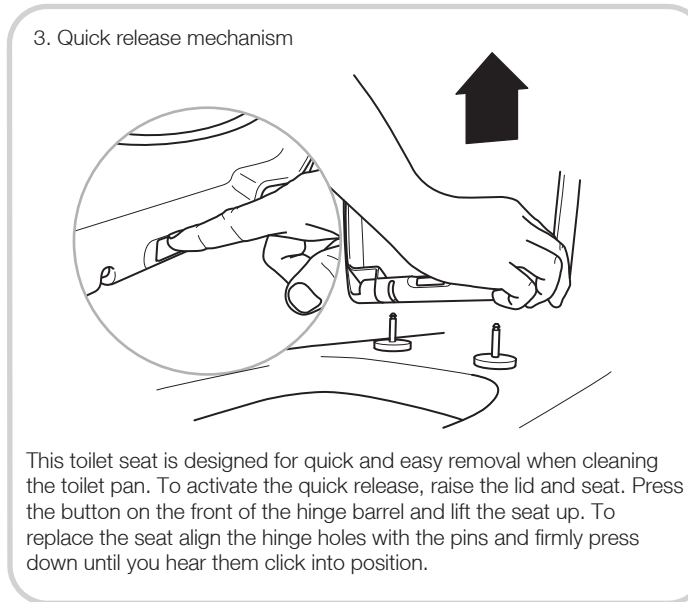

### 3. Quick release mechanism



The diagram shows a hand pressing a button on the front of the hinge barrel. An upward arrow indicates the seat will lift.

This toilet seat is designed for quick and easy removal when cleaning the toilet pan. To activate the quick release, raise the lid and seat. Press the button on the front of the hinge barrel and lift the seat up. To replace the seat align the hinge holes with the pins and firmly press down until you hear them click into position.

## AFTERCARE INSTRUCTIONS

-  Clean surfaces with a soft damp cloth and mild soap solution
-  Do not scrub or scour
-  Do not use abrasive cleaning agents on the seat. The seat must be kept in an upright position until any WC cleaner has been flushed away to prevent discolouring
-  Do not stand on the lid or ring of your toilet seat

## SAFETY INSTRUCTIONS

After a few days check that the fixings are still tight. This is necessary as the rubber components may compress during the first few days. Periodically check all fixings to ensure none have come loose and re-tighten where necessary. Please take care when handling or moving the toilet seat as careless handling may cause damage or injury. The toilet seat can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrect product installation or assembly.