

### 15mm Trade Magnetic Scale Inhibitor 403274

#### Specification

Colour Code	Lime Green
Dimensions	20(h) x 120(w) x 20(d) mm (without connections) 20(h) x 160(w) x 20(d) mm (with connections)
Weight	0.204kg
Pipe Diameter	15mm
Body Material	Copper
Filling Type	Compression
Maximum Flow Rate	32 litres / minute
Maximum Operating Pressure	8 Bar

#### Features

Installation	Easily installed, slip couplings for easy fit
Maintenance	Needs no chemicals or power, no maintenance required
Power Source	Needs no chemicals or power, earth bonding not required
Manufacture	Made in the UK with Scalemaster® patented technology
Protection	Single Appliance Protection against Limescale
Economical	Saves on energy costs
Installation Instructions	Please see next page
Additional Information	Please see next page



#### Key Features + Benefits



#### Certifications + Accreditations

#### Scalemaster Ltd

Emerald Way, Stone Business Park, Stone, Staffordshire ST15 0SR. Technical Helpline: 01785 811636 Email: info@scalemaster.co.uk

All information on the data sheet is correct at the time of publication. All measurements are approximate and subject to standard tolerances.

## Technical Data Sheet | Scale Inhibitors

www.instinctproducts.co.uk

### 15mm Trade Magnetic Scale Inhibitor 403274

#### Features

##### Installation Instructions

Magnetic Scale Inhibitors are only suitable for individual Appliance Protection.

Plumb into the cold water supply pipe a minimum of one metre to a maximum of 2 metres before the appliance.

- Operating temperature 4°C - 40°C
- Do not allow to freeze
- Maximum operating pressure 8 Bar
- Use the compression fittings supplied to connect into the cold water supply pipe having first cut out a 95mm of pipe
- **Do not solder**
- Installation should be made to comply with all local byelaws and building regulations

##### Additional Information

**Using a Kettle** – Magnetic effect changes hard water scale into tiny particles. The particles pass out of hot water heating systems in the flow of water called off for use. However to prevent an accumulation of scale particles in a kettle pour away any unused hot water and refill with cold.