

SINGLE DOOR QUADRANT

IMPORTANT

Please familiarise yourself with the fitting instructions before commencing fitting.								
1	Check that you have the tools required							
2	Check that the installation site is compatible							
	with size of door supplied							
3	Check all the enclosure components							
4	Check that the installation kit is complete							


DO NOT attempt to install the product unless you can tick **ALL 4** boxes as satisfactory.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud - partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect shower enclosure before fitting. No claims will be accepted after product has been installed.

ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING.DO NOT LEAVE THE GLASS ON HARD SURFACES ADN AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.

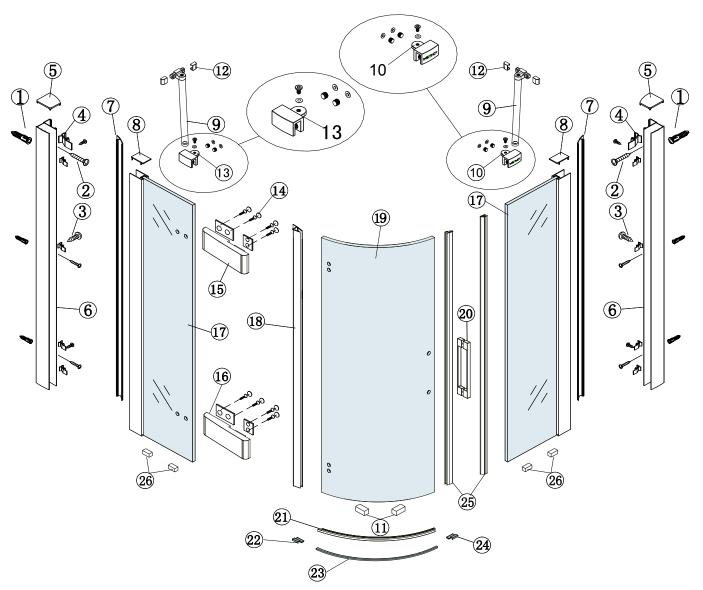

No.	Qty	Description	Part No.	No.	Qtv	Description	Part No.	No.	Qty	Description	Part No.
1	10	Wall plug	SP0D1123	(11)	2	Moving panel spacer	A01S0213	21)	1	Bottom seal	INSQBMSL
2	10	Pan head screw 4 x 30	SP0D0ST430	12	2	Bracing bar cover cap	A01S0619	22	1	Fixed panel footplate	INSQFPL
3	6	Pan head screw 4 x 12	SP0D0ST412	13	1	Bracing bar clamp	A01S0243	23	1	Threshold	INSQLUNA
4	10	Cover strip clip	A01S0116	14)	8	Hinge cover cap	SP0D2019	24	1	Closing post footplate	INSQFPR
(5)	1	Wall profile cover cap	A01S0190	15	1	Hinge 1	INSQHNG1	25	1	Magnet seal set	A01S0635
6	2	Wall profile	A01S0177	16	1	Hinge 2	INSQHNG2	26	2	Fixed panel block	A06S0063
7	2	Cover strip	A01S0115	17	1	Fixed panel	С				
8	1	Upright profile cap	A01S0188	18	1	Moving panel hinge seal	A01S0633				
9	1	Bracing bar	Α	19	1	Moving panel	В				
10	1	Bracing bar clamp	A01S0242	20	1	Handle	A01S0235				

