


KINSLEY SOFT CLOSE TOILET SEAT

INST02028

INSTINCT®


INSTALLATION & AFTERCARE INSTRUCTIONS Please read carefully before attempting to fit the seat. If you are not the end user, please make sure the aftercare instructions are made available for the end user to read.

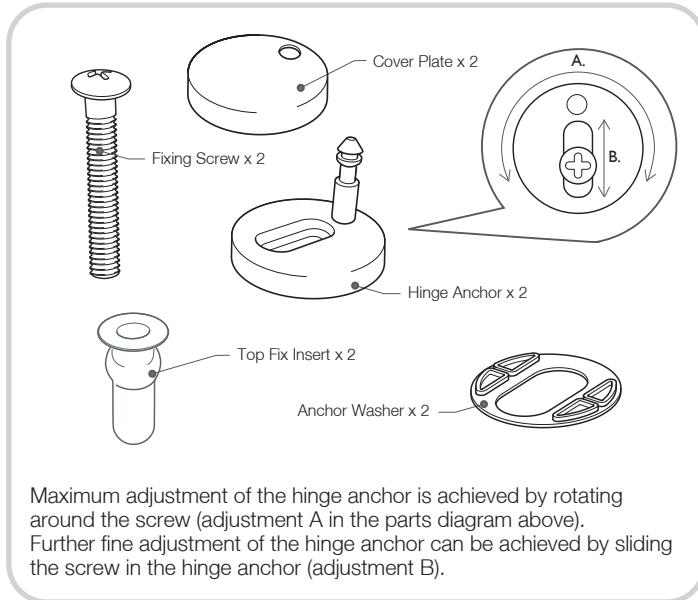

Maximum adjustment of the hinge anchor is achieved by rotating around the screw (adjustment A in the parts diagram above). Further fine adjustment of the hinge anchor can be achieved by sliding the screw in the hinge anchor (adjustment B).

Labels in diagram: Cover Plate x 2, Fixing Screw x 2, Hinge Anchor x 2, Top Fix Insert x 2, Anchor Washer x 2.


1. Insert anchor and top fix insert

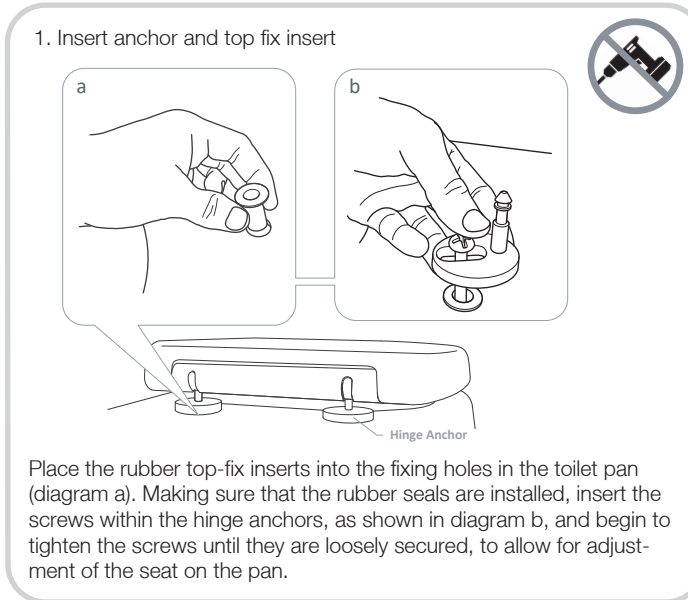

Place the rubber top-fix inserts into the fixing holes in the toilet pan (diagram a). Making sure that the rubber seals are installed, insert the screws within the hinge anchors, as shown in diagram b, and begin to tighten the screws until they are loosely secured, to allow for adjustment of the seat on the pan.


Labels in diagram: a, b, Hinge Anchor.

2. Fitting the seat

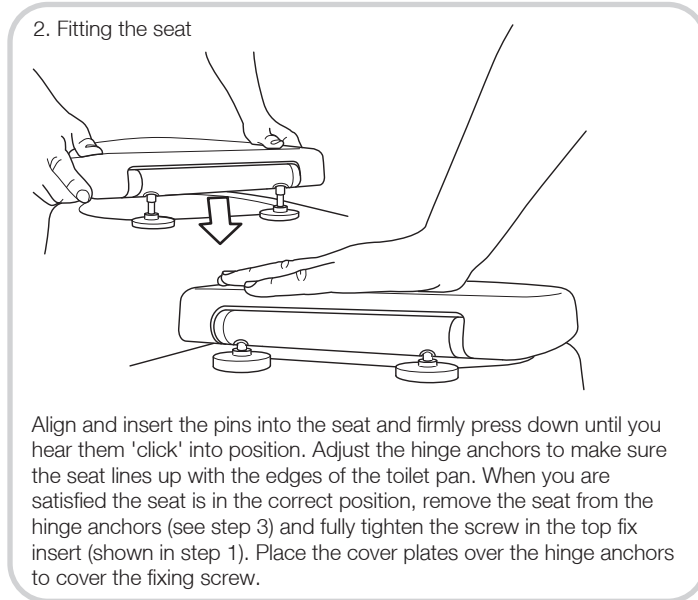



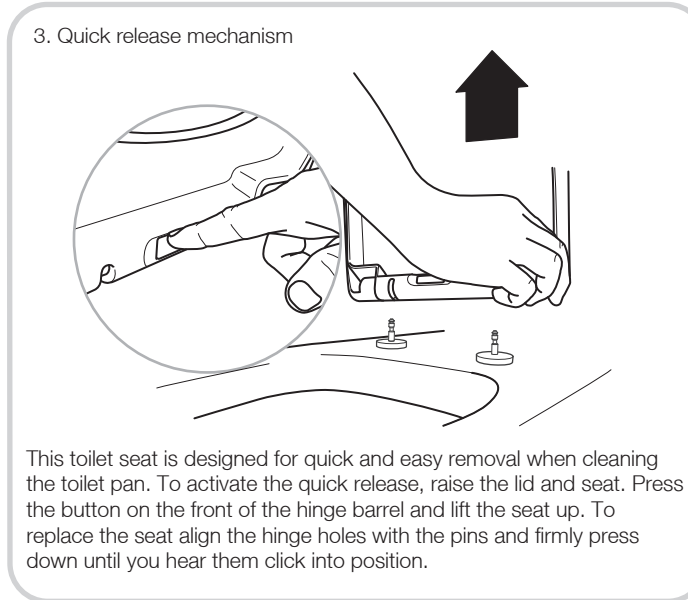

Align and insert the pins into the seat and firmly press down until you hear them 'click' into position. Adjust the hinge anchors to make sure the seat lines up with the edges of the toilet pan. When you are satisfied the seat is in the correct position, remove the seat from the hinge anchors (see step 3) and fully tighten the screw in the top fix insert (shown in step 1). Place the cover plates over the hinge anchors to cover the fixing screw.

3. Quick release mechanism



This toilet seat is designed for quick and easy removal when cleaning the toilet pan. To activate the quick release, raise the lid and seat. Press the button on the front of the hinge barrel and lift the seat up. To replace the seat align the hinge holes with the pins and firmly press down until you hear them click into position.

AFTERCARE INSTRUCTIONS

-  Clean surfaces with a soft damp cloth and mild soap solution
-  Do not scrub or scour
-  Do not use abrasive cleaning agents on the seat. The seat must be kept in an upright position until any WC cleaner has been flushed away to prevent discolouring
-  Do not stand on the lid or ring of your toilet seat

SAFETY INSTRUCTIONS

After a few days check that the fixings are still tight. This is necessary as the rubber components may compress during the first few days. Periodically check all fixings to ensure none have come loose and re-tighten where necessary. Please take care when handling or moving the toilet seat as careless handling may cause damage or injury. The toilet seat can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrect product installation or assembly.